




STORM SMALL BASTER

datasheet

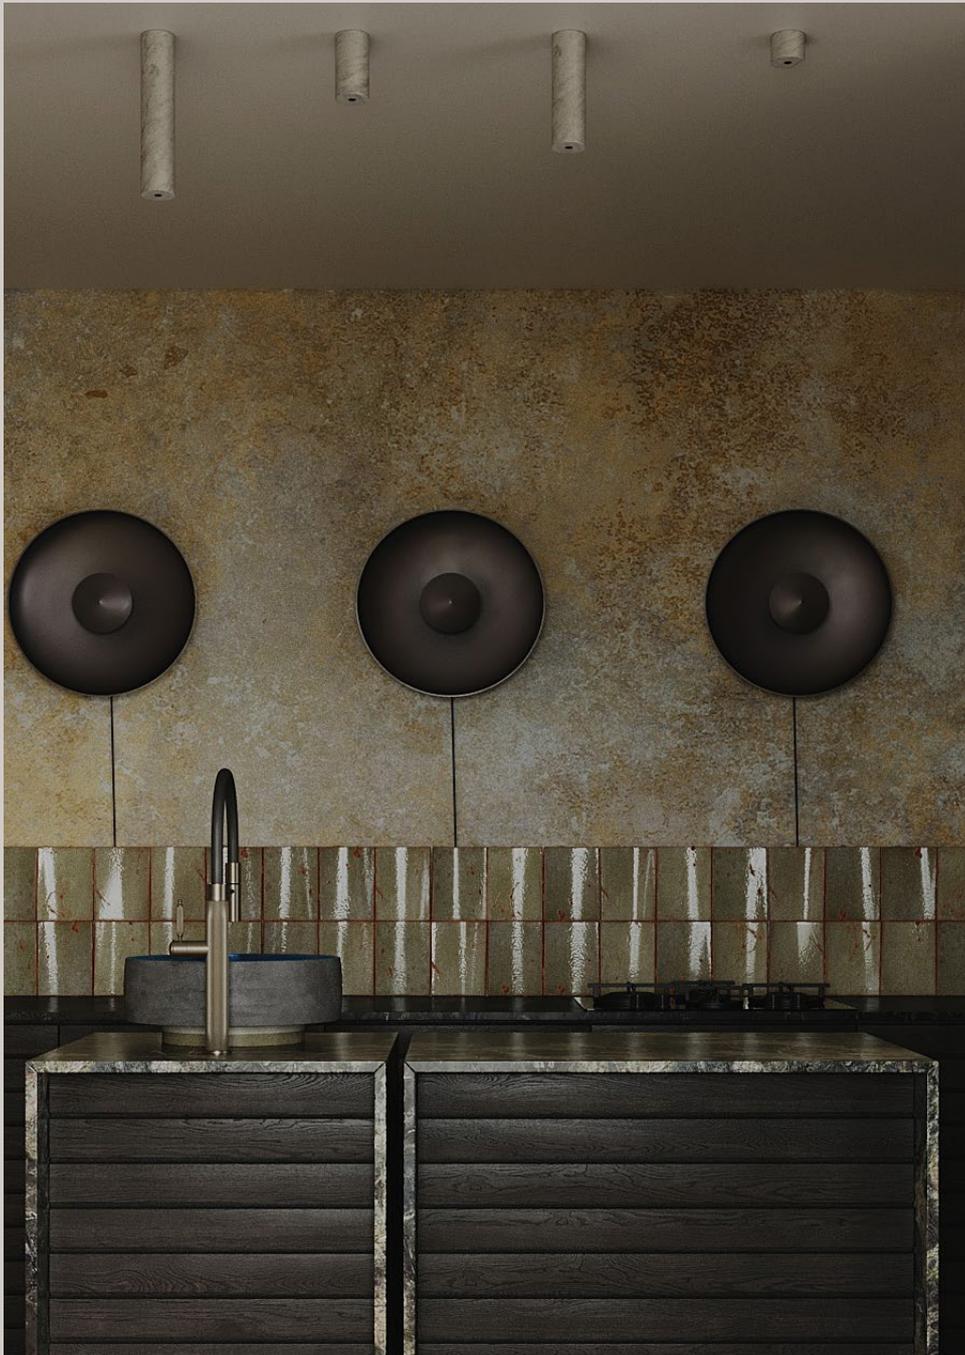

Project: Private Residence | Lighting design: PUNTOFILIPINO

The STORM SYSTEM® collection is carefully designed to flush the surface of any ceiling or wall, and all products will appear with an absolute minimum of tolerance and visibility.

A soft, pleasant light is emitted through the alabaster stone.

GENERAL DATA

Collection

STORM SYSTEM®

Product

Storm Small Baster

Article no.

- 1A00.0115.3265 (alabaster 50)
- 1A00.0115.3273 (alabaster 50)
- 1A00.0115.3285 (alabaster 50)
- 1A00.0116.3265 (alabaster 120)
- 1A00.0116.3273 (alabaster 120)
- 1A00.0116.3285 (alabaster 120)
- 1A00.0117.3265 (alabaster 210)
- 1A00.0117.3273 (alabaster 210)
- 1A00.0117.3285 (alabaster 210)
- 1A00.0118.3265 (alabaster 300)
- 1A00.0118.3273 (alabaster 300)
- 1A00.0118.3285 (alabaster 300)

SPECIFICATIONS

Weight

250 g – 500 g

Material

Aluminium and natural stone

Fixture finish

Alabaster

IP protection grade



IP20

Labelling

CE

Safety distance

0,3m

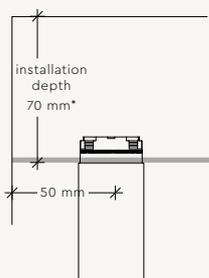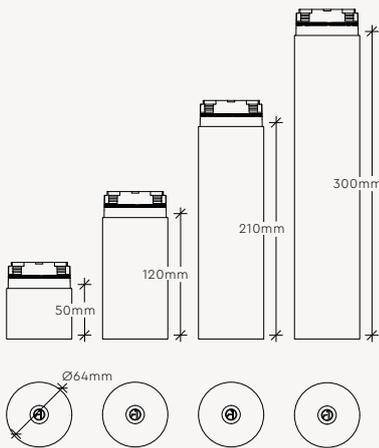

ELECTRICAL SPECIFICATION

1A00.011X.3273 – CONSTANT CURRENT

Light Source	LED (included)
Supply	5W 34V 130mA
CCT	2700K (nature stone – variations can occur!)
IES/LDT	review LUX FILES >
Insulation class	Class III ⚡

Additional requirements: (not included)

Driver	1AD.420PC20.DS Phasecut	Installation depth	70mm* (remote driver)
	1AD.300DA12.DS Dali		
	1AD.420DA20.DS Dali		



1A00.011X.3285 – CONSTANT VOLTAGE

Light Source	LED (included)
Supply	24Vdc 7W
CCT	2700K (nature stone – variations can occur!)
IES/LDT	review LUX FILES >
Insulation class	Class III ⚡

Additional requirements: (not included)

Driver	1AD.CV24PC24 Phasecut	Installation depth	70mm* (remote driver)
	1AD.CV24DA24 Dali		



1A00.011X.3265 – MAIN VOLTAGE

Light Source	LED (included)
Supply	6W AC200–240V 50/60Hz
CCT	2700K (nature stone – variations can occur!)
IES/LDT	review LUX FILES >
Insulation class	Class II ⚡




LOCAL DRIVER – Installation depth

If installation requires a locally positioned LED driver, please review chart below.

ATTENTION! installation must be carried out by an authorized installer, in accordance with national legislation

SYSTEM →	SMALL		
	PLASTER RING 1A00.0002.01	BACK-MOUNTED RING 1A00.0049.xx	BACK 007 RING 1A00.0047.x4
1AD.xxxPCxx	100 mm	110 mm	110 mm
1AD.420PC20.DS	130 mm	150 mm	150 mm
1AD.300DA12.DS	110 mm	130 mm	130 mm
1AD.1050DA15.420	110 mm	130 mm	130 mm
1AD.420DA20.DS	110 mm	130 mm	130 mm
1AD.500DA20.DS	130 mm	150 mm	150 mm
1AD.CV24xx24	130 mm	150 mm	150 mm
1AD.CV24DA120	240 mm	280 mm	280 mm

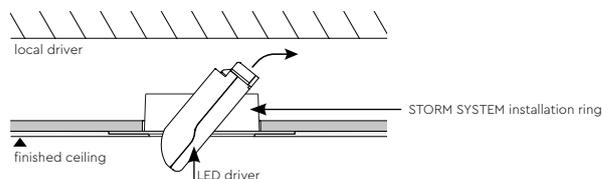

*Installation depth doesn't include driver. Please check driver specification. Installation depth can be reduced to 55mm if heat shrink crimping cable connection is used.

ADDITIONAL REQUIREMENTS: (not included)

Installation rings - choose one of the installation rings below


- Storm Small Plaster Ring – 1A00.0002.01
- Storm Small Back-Mounted Ring – 1A00.0049.xx
- Storm Small Back 007 Ring – 1A00.0047.04
- Storm Small Extension S120 – 1A00.0017.xx
- Storm Small Extension S300 – 1A00.0035.xx

NOTE:

Constant current and constant voltage products shall always be powered by SELV LED driver, output voltage of this driver in open circuit must not exceed 60V. Do NOT cover the LED driver or locate LED driver on top of fixture.

Be cautious while putting on/off the power supply, as excess current, excess voltage or reverse voltage may get injected to the device in some cases.

ATTENTION – external driver location is recommended.

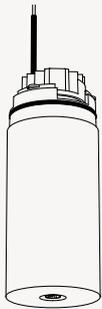

COMPONENTS

- Storm Small Baster
- Spring

PLEASE NOTE:

If the spring on the fixture is damaged, do not proceed installation – contact your dealer

IMPORTANT INFORMATION

Installation and mounting must be performed by a certified electrician only, and instructions must be followed. Always make sure the main power is off during installation. Pay attention to the fixture remarks, and always make sure to use the correct voltage.

CLEANING AND MAINTENANCE:

Use a soft moist cloth for cleaning. No further maintenance is required.

BRASS FINISHES

For detailed maintenance please review >

WARRANTY:

If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal

For more information, please contact info@onea.dk

ASSEMBLY INSTRUCTION



Page 1 of 2

STEP 1

1. Connect the supply cable with Storm Small Baster's cable.
2. Then mount the fixture into the installation ring
Do this by gently rotating the fixture until you feel resistance.
3. Then give it one last twist to ensure that the fixture snaps into place.

ATTENTION! Make sure you are using the correct power supply according to the fixture.

NOTE: When rotating the fixture choose the direction with the least resistance.

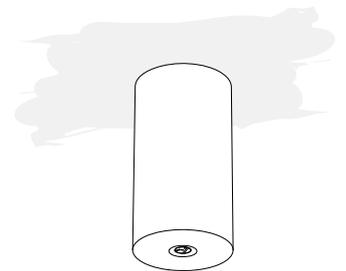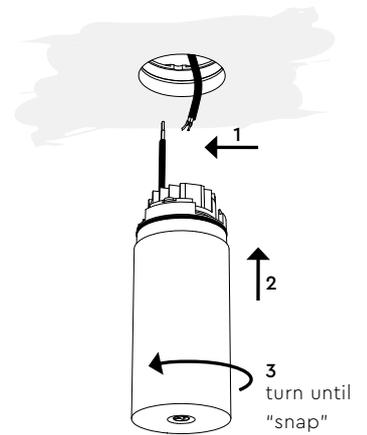

ASSEMBLY INSTRUCTION


Page 2 of 2

INSTRUCTIONS ON CHANGING LIGHT SOURCE

STEP 1


Take hold of the fixture and pull down gently, whilst slightly rotating.

NOTE: When rotating the fixture choose the direction with the least resistance.

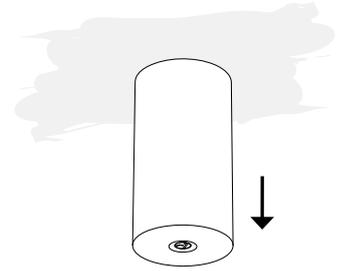


STEP 2

Disconnect the wires

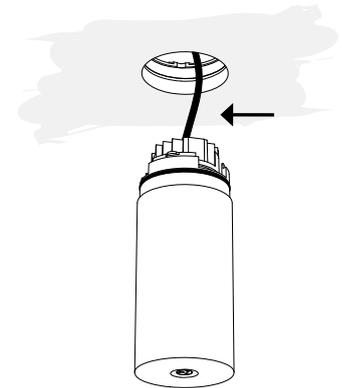

STEP 3

Remove the retaining ring using light pressure. Then replace the light source and reattach the retaining ring – make sure it snaps.

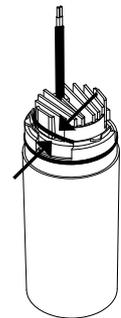

STEP 4


Connect the supply cables.

Then mount the fixture into the plaster ring/back-mounted ring.

Do this by gently rotating the fixture until you feel resistance, then give it one last twist to ensure that the fixture is securely fastened.

ATTENTION! Make sure you are using the correct power supply according to the fixture.

NOTE: When rotating the fixture choose the direction with the least resistance.

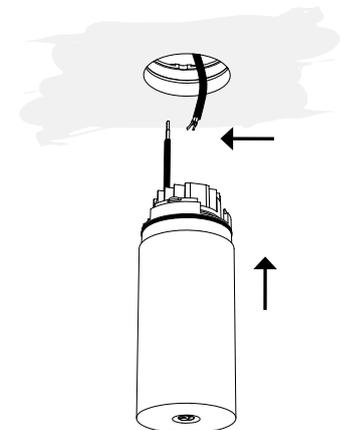

IMPORTANT INFORMATION

Installation and mounting must be performed by a certified electrician only, and instructions must be followed. Always make sure the main power is off during installation. Pay attention to the fixture remarks, and always make sure to use the correct voltage.

CLEANING AND MAINTENANCE:

Use a soft moist cloth for cleaning. No further maintenance is required.

BRASS FINISHES

For detailed maintenance please review [▶](#)

WARRANTY:

If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal


For more information, please contact info@onea.dk

DISASSEMBLY INSTRUCTION

STEP 1


Take hold of the fixture and pull down gently, whilst slightly rotating.

NOTE: When rotating the fixture choose the direction with the least resistance.

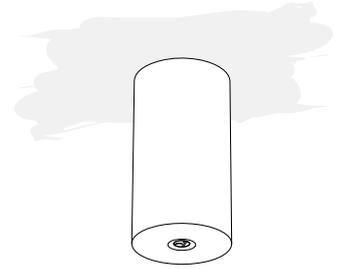

STEP 2

Disconnect the cables

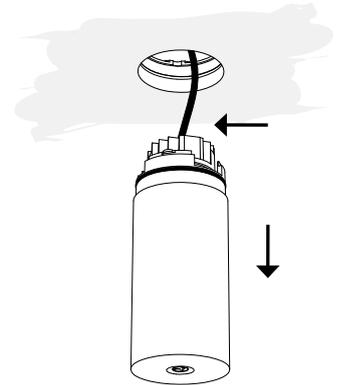

IMPORTANT INFORMATION

Installation and mounting must be performed by a certified electrician only, and instructions must be followed. Always make sure the main power is off during installation. Pay attention to the fixture remarks, and always make sure to use the correct voltage.

CLEANING AND MAINTENANCE:

Use a soft moist cloth for cleaning. No further maintenance is required.

BRASS FINISHES

For detailed maintenance please review [►](#)

WARRANTY:

If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal

For more information, please contact info@onea.dk